


Awliscombe Village Hall Audio Visual User Instructions V9



The case containing the devices and cables is kept in the bar drawer.

SWITCH ON THE EQUIPMENT IN THE DATA CABINET IN THE BAR USING THE SWITCH ON THE WALL. PLEASE SWITCH THIS OFF WHEN YOU HAVE FINISHED.

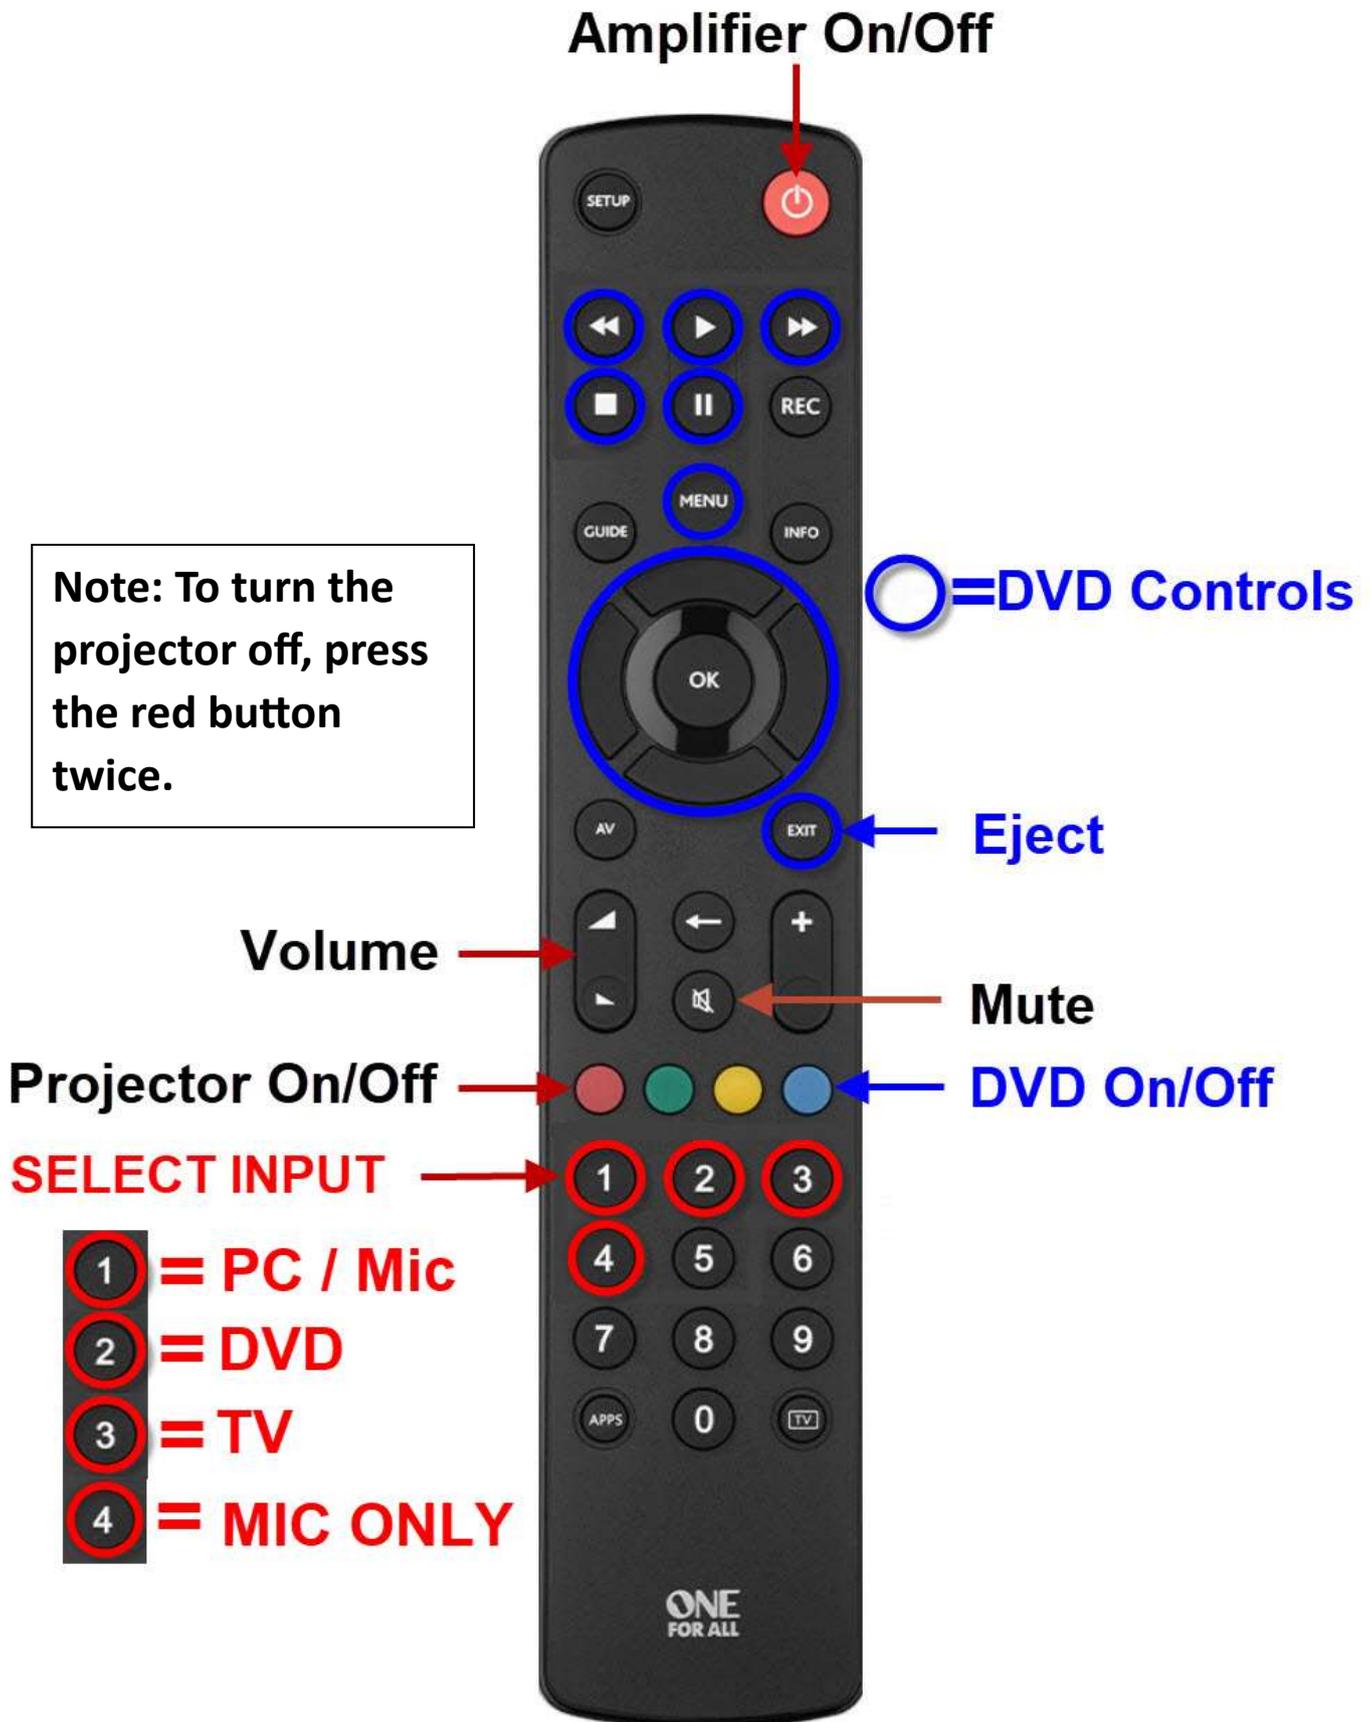

We have attempted to include all essential functions where possible through the single 'One for All' remote control, more detailed operations may require using the original remote(s) which may be found in the bottom of the case. The front panel of the Sony Receiver can be used too. **Please do NOT change other settings!**

Note: Apart from the projector, please point the remote control towards the IR device at top right of bar hatch or at the AV Receiver in the data cabinet in the bar. This also displays the selected input.



Hearing Loop

All audio is fed through the hearing loop which requires no attention. Tune a hearing aid into the loop in the usual way.

Projector Screen

The projector screen is controlled independently by use of the up down buttons concealed behind the left-hand stage curtain.



1. PC Presentation with Microphone

IMPORTANT NOTE: Using the microphone without a PC requires Option 4

To the left of the stage behind the curtain.

Switch on the white plug marked PC / MIC which supplies the wireless microphone and associated equipment on top of the sub-woofer. You will see lights come on.

Switch down to **PC & MIC**



Plug the HDMI cable from the PC into the socket labelled **PLUG PC HERE**



If required the network cable can also be used if not using wireless.

On the remote control, press **Amplifier On / Off**

Press **Projector On**

Press **No. 1**  Display on Sony amp displays **PC / MIC**

See also **Using the Microphone** section below

2. DVD (Blu-Ray)

Connect the centre speaker by plugging in LHS of stage.

Note polarity: Red to Red / Black to Black

Turn on Sub-Woofer at mains LHS of stage.

Insert DVD or Blue Ray Disc (Use the steps provided to insert disc)

Press **Amplifier On / Off**

Press **Projector On / Off**

Press No. 2  Display on Sony amp displays **DVD**

Control using the buttons highlighted as DVD Controls in blue in the picture page 1.

3. TV

Connect the centre speaker by plugging in LHS of stage.

Note polarity: Red to Red / Black to Black

Turn on Sub-Woofer at mains LHS of stage.

Press **Amplifier On / Off**

Press **Projector On / Off**

Press No. 3  Display on Sony amp displays **TV**

Control TV using the separate  remote control



4. Microphone Only

IMPORTANT NOTE: Using the microphone with a PC requires Option 1

To the left of the stage behind the curtain.

Switch on the white plug marked PC / MIC which supplies the wireless microphone and associated equipment on top of the sub-woofer. You will see lights come on.



Switch up to **MIC ONLY**

On the remote control, press **Amplifier On / Off**

Press **Projector On**

Press **No. 4**  Display on Sony amp displays **MIC ONLY**

Using this option requires the volume turned up high.

See also **Using the Microphone** section below

Using the Microphone

**IMPORTANT NOTE: If using a PC use option 1. PC / MIC
If only using the microphone use option 4 MIC ONLY**

Use microphone One, although both can be used if required. The volume needs to be set quite high for the microphone.

You may need to change the batteries.

The microphone has a multi-function control.



- 1. POWER/STATUS LED** will light green when the microphone is powered on. The LED will flash when Mute mode is engaged and will turn off when the mic is powered down. The LED will flash red when the batteries are low and need to be replaced.
- 2. VOLUME UP/DOWN** buttons perform several functions:
Volume – Press the buttons briefly to turn the volume up or down.
Mute – Hold the DOWN button to mute the microphone, press UP to unmute.
Power – Hold the UP button to turn the microphone on. While in Mute mode hold the DOWN button again to power off.

Note – if the microphone is left in Mute mode for 10 minutes, the power will automatically turn off.
- 3. Changing the batteries** – with the microphone powered off, unscrew the lower half of the body to expose the battery slots. Observing the correct polarity, insert 2 AA batteries, replace the body and turn on.

Spotify Connect (stream music from Spotify Premium app)

Turn on Sub-Woofer at mains LHS of stage if required.

Connect your device to the village hall wireless network.

Using Spotify Connect, select Village Hall.

This will connect by Chromecast on Android or Airplay on iPhone

Bluetooth (play audio over Bluetooth from your mobile device)

Turn on Sub-Woofer at mains LHS of stage if required.

Press **Amplifier On**

Press **Pair Bluetooth** button on the Amplifier



Turn on Bluetooth on your device and Scan for 'Village Hall' accept the pairing and playback whatever you wish.

Pairing is only required once for each device. Next time just select Village Hall from your paired devices. Only one device may pair at one time.

Mood Lighting (multi coloured LED strip at the back of the hall)

Switch on using the 4th light switch on the wall. This may then be controlled by the round remote control which is kept in the top RH cupboard in the bar. It controls both colour and brightness.

It may also be controlled using the Tuya Smart app by invite only.

Please replace the controls & cables in the bar draw and switch everything off.

K. Coxon V9 March 2026