



6 Using your Tamo

6.1 Opening / unlocking

1. Open the weather cover (see **Image 14**).

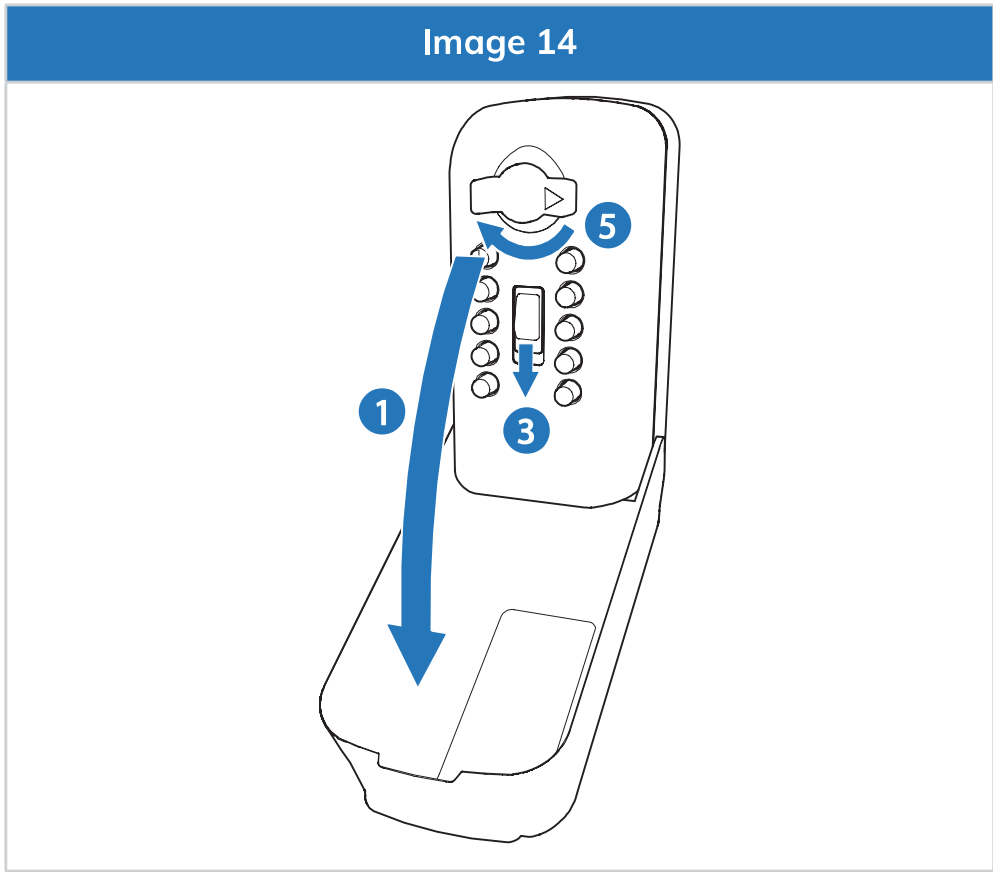

2. Ensure the arrow is pointing at the locked symbol (see **Image 15**).

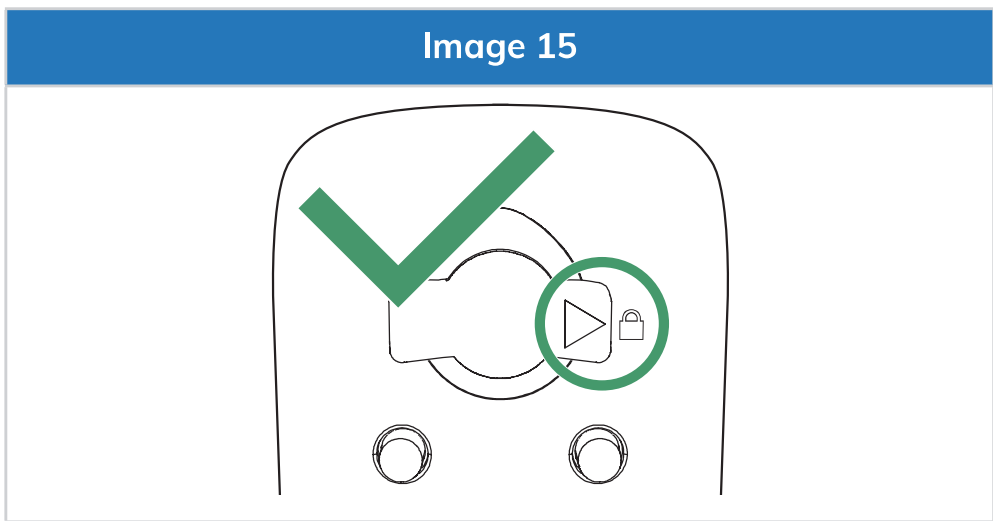

3. Pull down the clear button.
4. Enter your code.
5. Rotate the open dial 180° clockwise towards the unlock symbol to open.
6. Open the key safe.
7. If the key safe doesn't open:
 - a. Check you have the correct code.
 - b. Clear any previous attempts by pressing down the clear button.
 - c. Ensure the arrow is pointing at the locked symbol.
 - d. Try again (see **Image 16**).

