

## Maxey Village Hall

### Sound System Instructions:

The controls for the sound system are located in and on the black cabinet on the stage.

1. Turn on power to the system using this plug.




2. There is a CD player which can take up to 5 CDs. The player will need to be switched on if you are using it.



In addition, set the white selector switch to no 1. The bottom dial on the white system controls the sound.



3. To play music from your phone use the jackplug to connect to your phone or PC. You may need your own adaptor as many modern smart phones and PC do not have a jackplug feature anymore. Set the White system control to No 3 – line in.

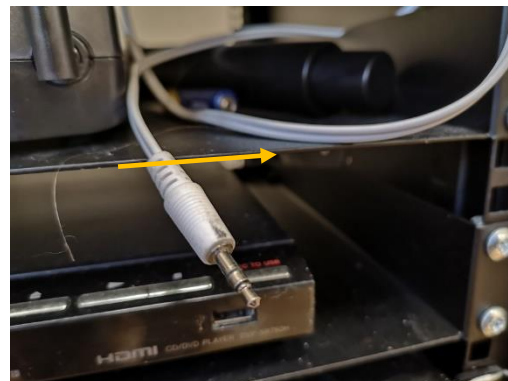

#### 4. Microphone

There are two microphones set to different frequencies – if you are using only one then either can be used.

Switch on Microphone control. Select a micro phone and switch on and test and you should have sound coming out of the speakers



**Remember to switch off Sound System on wall plug when you have finished using it!**

#### WiFi

Public wifi is available in the hall, search for Cambwifi\_public and follow the on screen instructions – no password is required. Please be aware that data on this public system is monitored.